


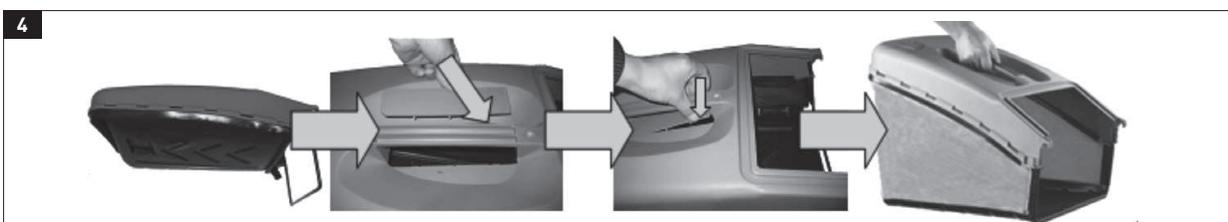
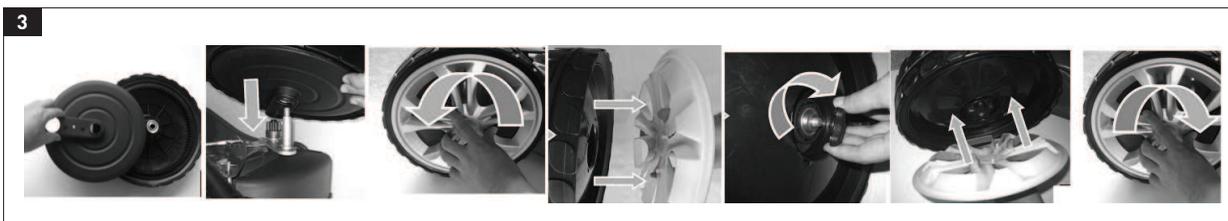
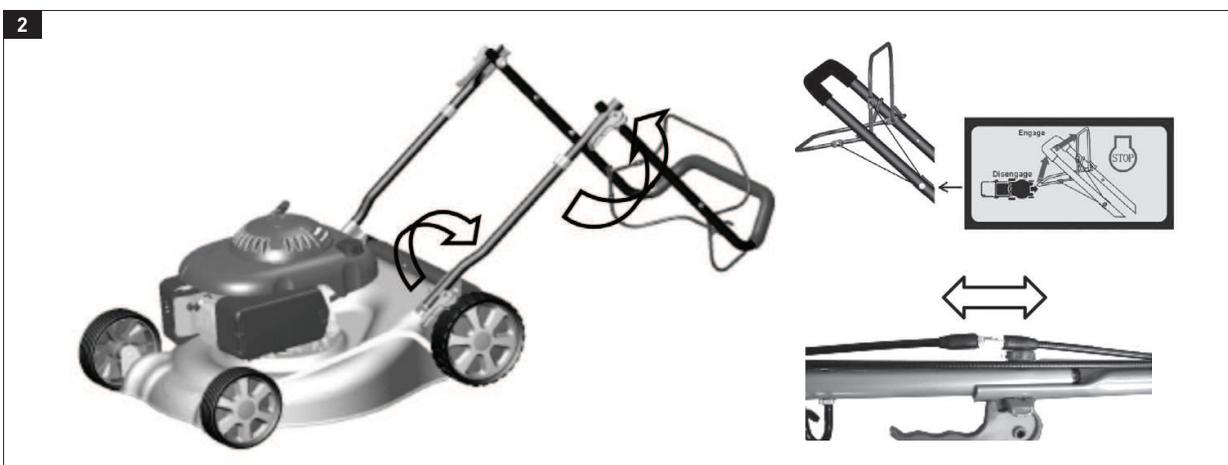
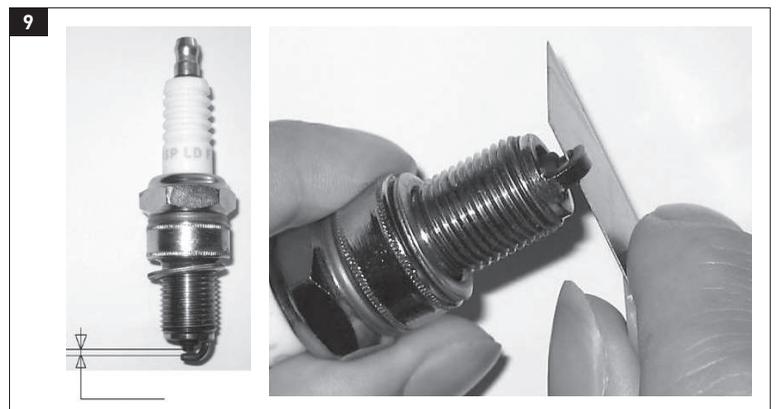


FIELDMANN[®]
Home & Garden Performance

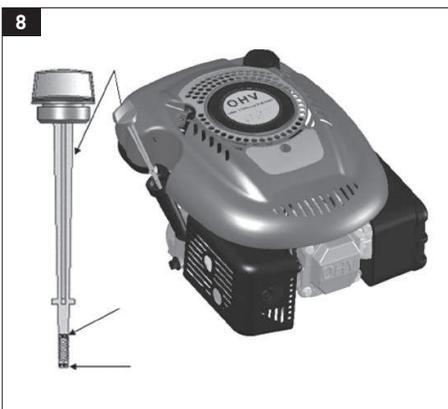

FZR 3004-B/FZR 3007 BS

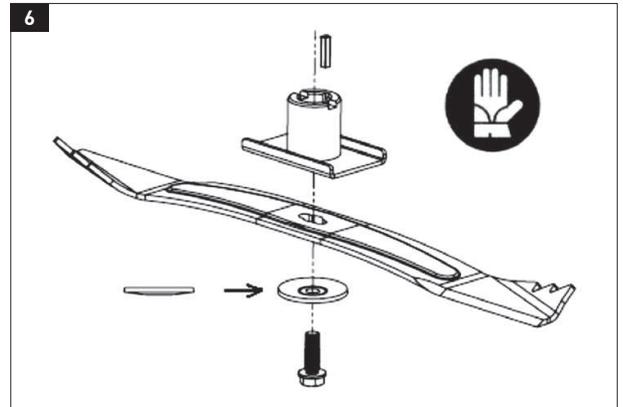

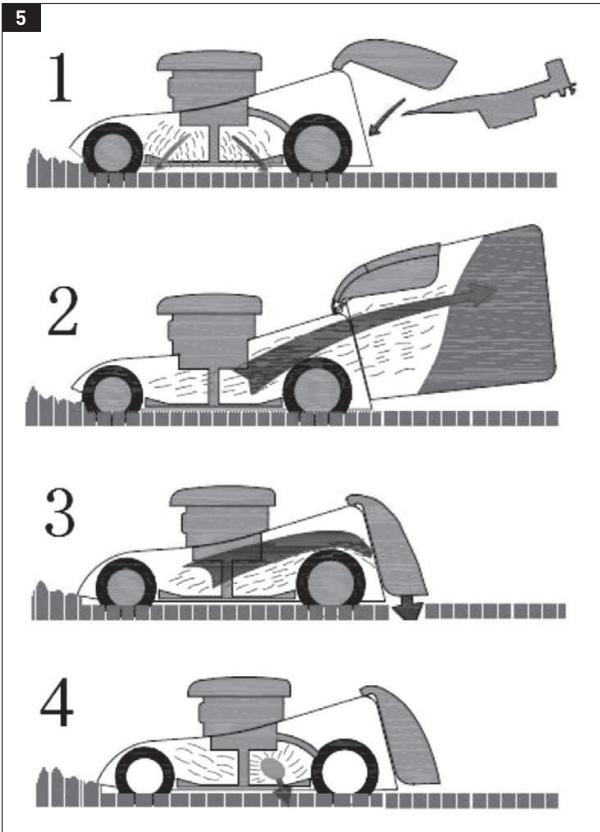

SELF-PROPELLED LAWN MOWER

USER'S MANUAL

Thank you for purchasing this self-propelled garden lawnmower. Before you start using it, please, carefully read this user's manual and save it for possible future use.

CONTENTS

ILLUSTRATED ATTACHMENT	2-3
1. GENERAL SAFETY INSTRUCTIONS	6
2. EXPLANATION OF INSTRUCTION LABELS ON THE MACHINE	7
3. MACHINE DESCRIPTION AND INCLUDED CONTENTS	8
4. LAWNMOWER ASSEMBLY	9
5. PUTTING INTO OPERATION	9
6. OPERATING INSTRUCTIONS	12
7. MAINTENANCE AND STORAGE	15
8. TECHNICAL SPECIFICATIONS	17
9. WHAT TO DO „WHEN...“	18
10. DISPOSAL	18

1. GENERAL SAFETY INSTRUCTIONS

Important safety notices

- ☼ Carefully unpack the product and take care not to throw away any part of the packaging before you find all the parts of the product.
- ☼ Store the lawnmower in a dry place out of reach of children.
- ☼ Read all warnings and instructions. Not following warnings or instructions may lead to injury by electrical shock, a fire and/or serious injuries.

Packaging

The product is packed in a package that prevents damage during transport. This package is a resource and so can be handed over for recycling.

User's manual

Before you start working with the electric garden lawnmower, read the following safety and usage instructions. Understand the operating elements and the correct use of the device. Keep the user's manual in a safe place where it can be easily retrieved for future use.

Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this machine, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this product for repair).

 **Note:** If you hand over the machine to somebody else, do so together with the user's manual. Following the instructions in the included user's manual is a prerequisite for the proper use of the lawnmower. The user's manual also contains operating, maintenance and repair instructions.

The manufacturer takes no responsibility for accidents or damages resulting from not following the instructions in this manual.

2. EXPLANATION OF INSTRUCTION LABELS ON THE MACHINE



General danger warnings.
Attention, rotating blades!



Before putting into operation, carefully read the user's manual.



Sharp blade/s. Protect yourself against injury and loss of fingers.
Attention, rotating blades!



Watch out for objects detected by the rotating blade!




Keep other people away from the work area.



Remove spark plug lead before maintenance.



Make sure that people standing nearby are not injured by detected foreign objects.
Clear the mowing area. Keep children and others a safe distance from the machine.

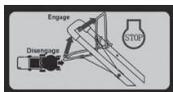

Driving and stopping the lawnmower.

3. MACHINE DESCRIPTION AND INCLUDED CONTENTS

MACHINE DESCRIPTION (see pic. 1)

1	Handle	7	Height adjust handle
2	Brake lever	8	Air filter
3	Driver lever	9	Side discharge board
4	Startér	10	Side discharge switch
5	Quick fix handle	11	Spark plug
6	Grass catcher		

 **WARNING:** Sharp blades.

Supplied contents

Carefully take out the lawnmower from the packaging and check whether all the following parts are present:

-  Self-propelled lawnmower 1 piece
-  Grass catcher 1 piece
-  Bearing 4 pieces
-  Wheels 2 pieces
-  Wheel center 2 pieces
-  Nuts 2 pieces
-  Washer 2 pieces
-  User's manual

If there are parts missing or they are damaged, please contact the retailer from whom you bought the machine.

4. LAWNMOWER ASSEMBLY

The lawnmower is supplied disassembled. The complete adjustable handle and collection box must be assembled before starting work. Proceed step by step according to the user's manual and use the pictures as a guide so that the assembly process is as easy as possible.

⚠ ATTENTION: Do not use any additional equipment, which was not recommended by the manufacturer.

SET UP YOUR LAWNMOWER (see pic. 2)

⚠ IMPORTANT: Unfold handle carefully so as not to pinch or damage control cables.

1. Raise handles until lower handle section locks into place in mowing position.
2. Remove protective padding, raise upper handle section into place on lower handle and tighten both handle knobs.
3. Remove handle padding holding operator presence control bar to upper handle.

WHEEL ASSEMBLY (see pic. 3)

Assemble the wheels on the mower as in the pictures.

Make sure that the star nut strong enough.

Instruction for plastic catcher assembly (see pic. 4)

1. Take plastic catcher out of the package.
2. Take the small cover part from packing bag.
3. Press the cover part into catcher as picture shown
4. Fix the plastic jacket in the metal bracket.

5. PUTTING INTO OPERATION

Your new lawn mower has been assembled and tested at the factory.

⚠ ATTENTION: This lawn mower is shipped WITHOUT OIL OR GASOLINE in the engine.

OPERATION

Brake lever –must be held down to the handle to start the engine. Release to stop the engine.

Starter handle - used for starting engine.

Drive control lever (self-propelled lawnmower)- used to engage power-propelled forward motion of lawn mower.

Range of application

Cutting the grass (see pic. 5)

- ✿ Cutting up and depositing the grass on the lawn
- ✿ Cutting up and collected in the grass catcher
- ✿ Cutting up and ejecting backwards
- ✿ Cutting up and ejecting sideways.

Mulching

- ✿ Installation and removal of the accessories must always be take place with switched off engine.
- ✿ Please make sure the stability of the attached mulching accessories after installing.
- ✿ For mulching plate, you only allowed use the accessories from original factory
- ✿ Always avoid to clear away an excessive quantity grass so that the mower mechanism and the engine are overloaded.
- ✿ Reducing the speed of self-propelled will help you to pass excessive grass.

Assembly of accessories

Put the baffle plate and raises, aim at the round hole underside, fax up the auto locking hook engage.

Disassembly of accessories

Press the tightly by thumb in the center, then loose and deflect direction take down the mulching plate.

Hang up the grass catcher

Raise the baffle plate and hang up the grass catcher in the illustration shown.

DRIVE CONTROL (see pic. 2)

- ✿ Self-propelling is controlled by holding the operator presence control bar down to the handle and pushing the drive control lever forward until it clicks; then releasing the lever.
- ✿ Forward motion will stop when the operator presence control bar is released. To stop forward motion without stopping engine, release the operator presence control bar slightly until the drive control disengages. Hold operator presence control bar down against handle to continue mowing without self-propelling.

ADJUST CUTTING HEIGHT

Raise wheels for low cut and lower wheels for deepcut, adjust cutting height to suit your requirements. Medium position is best for most lawns.

BEFORE STARTING ENGINE ADD OIL

- ✿ Your lawnmower is shipped without oil in the engine.
- ✿ Before each subsequent use the oil level must be check and if necessary topped up with 500ml SAE30 (15W-40) engine oil For type and grade of oil to use, see „ENGINE“ in the Maintenance section of this manual.

⚠ ATTENTION: Do not overfill engine with oil, or it will smoke heavily from the muffler on startup.

1. Be sure lawnmower is level.
2. Remove oil dipstick from oil fill spout.
3. Insert and tighten dipstick.
4. Check oil level before each use. Add oil if needed.
5. Fill to full line on dipstick.
6. Change the oil after every 25 hours of operation or each season.
7. You may need to change the oil more often under dusty, dirty conditions. See „TO CHANGE ENGINE OIL“ in the Maintenance section of this manual.

 **Note:** Check oil level before each use.

ADD GASOLINE (see pic. 7)

- ✿ Fill fuel tank to bottom of tank filler neck.
- ✿ Do not overfill.
- ✿ Use fresh, clean, regular unleaded gasoline.
- ✿ Do not mix oil with gasoline.
- ✿ Recommendation: Purchase fuel in quantities that can be used within 30 days to assure fuel fresh.

⚠ ATTENTION: Wipe off any spilled oil or fuel. Do not store, spill or use gasoline near an open flame.

📖 Note: Alcohol blended fuels (called gasohol or using ethanol or methane can attract moisture which leads to separation and for motion of acids during storage. Acidic gas can damage the fuel system of an engine while in storage.

- ✿ To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer.
- ✿ Empty the gas tank, start the engine and let it run until the fuel lines and carburetor are empty.
- ✿ Use fresh fuel next season.
- ✿ See Storage Instructions for additional information.
- ✿ Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.

START ENGINE

⚠ ATTENTION: Press or release the start switch carefully according to the manufacturer's instructions. Make sure that feet are at a sufficient distance from the cutting mechanism.
To start the engine, first make sure that the spark plug and that the machine is filled with sufficient oil and petrol.

📖 Note: Due to protective coatings on the engine, a small amount of smoke may be present during the initial use of the product and should be considered normal.

Hold operator presence control bar down to the handle and pull starter handle quickly. Do not allow starter rope to snap back.

📖 Note: In cooler weather it may be necessary to repeat priming steps.

STOP ENGINE

To stop engine, release operator presence control bar.

⚠ ATTENTION: The blade will continue to rotate for a few seconds after the engine has stopped. Disconnect the spark plug cap if the lawnmower is to be left unattended.

- ✿ Under certain conditions, such as very tall grass, it may be necessary to raise the height of cut to reduce pushing effort and to keep from overloading the engine and leaving clumps of grass clippings. It may also be necessary to reduce ground speed and/or run the lawnmower over the area a second time.
- ✿ For extremely heavy cutting, reduce the width of cut by overlap ping previously cut path and mow slowly.

- ✿ Pores in cloth grass catchers can become filled with dirt and dust with use and catchers will collect less grass. To prevent this, regularly hose catcher off with water and let dry before using.
- ✿ Keep top of engine around starter clear and clean of grass clippings and chaff. This will help engine air flow and extend engine life.

6. OPERATING INSTRUCTIONS

Purpose of use

- ✿ The lawnmower is suitable for use in private gardens.
- ✿ Lawnmowers considered to be suitable for use in private gardens are such devices, where the annual operation as a rule does not exceed 50 operating hours and which are predominantly used for the maintenance of lawn areas, but not public facilities, parks, sports fields or in agriculture or forestry.
- ✿ Do not use the product for purposes other than those intended.
- ✿ For safety reasons the lawnmower must not be used as a drive engine for any other work tools and tool sets, unless expressly permitted by the manufacturer.

OPERATION

- ✿ This product must not be used by children and persons with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the product, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- ✿ Never use the electric garden lawnmower if you are in close vicinity to other people, children or freely moving household pets.
- ✿ Use extra care if the product is used near children. Always keep the appliance out of the reach of children. Children must be supervised to ensure that they do not play with the product.
- ✿ Never allow children or persons who do not know the contents of this user's manual to work with the device. Local regulations may set the minimum age of the user. The user is responsible for damages caused to third parties in the lawnmower's working area as a result of its use.
- ✿ Do not use the machine if you are tired, under the influence of alcohol or narcotics.
- ✿ Before mowing, remove all foreign objects from the lawn, which maybe thrown by the machine.
- ✿ When transporting this device, grasp the whole lawnmower. Carrying the fuel tank is dangerous and can cause damage of the fuel tank or fire.
- ✿ Never smoke while operating the lawnmower.

⚠ ATTENTION: Due to health dangers to the user, the lawnmower must not be used to trim bushes, hedges or shrubs, for cutting or mulching edible young plants or lawns, on green roofs or for balcony pot plants, for cleaning (vacuuming) sidewalks or to be used as a crusher of pieces of trunks and branches. Furthermore the lawnmower must not be used as a motorized hoe, or for leveling of terrain, e.g. molehills

Instructions for use

Turn on and operate the machine as described in the user's manual, carefully follow all instructions.

- ✿ Work only during good visibility or ensure sufficient artificial lighting.
- ✿ Never operate the machine in enclosed, poorly ventilated rooms, or in the vicinity of ammable or explosive liquids, fumes or gases.

- ✿ Never use the lawnmower in places where there is danger of contact with a water surface (e.g. in direct vicinity of garden ponds, in-ground pools, etc.).
- ✿ Before you take off or empty the collection box, turn off the motor and wait until the blade has come to a complete stop.
- ✿ Before starting mowing, check the terrain where the lawnmower will be used and remove stones, wires, sticks, splinters, bones and other foreign objects, which could become caught in it or detected or cause injuries.
- ✿ Start or release the start switch carefully according to the manufacturer's instructions. Make sure that feet are at a sufficient distance from the mowing mechanism.
- ✿ Never use the product if you have wet hands or feet or without proper footwear.
- ✿ When mowing, wear solid, anti-slip footwear and long pants. Never work barefoot or in light sandals.
- ✿ Secure loose clothing, long hair or jewellery so that they cannot get caught by the moving parts of the machine.
- ✿ Never use the self propelled garden lawnmower in excessively steep terrain. Be very careful in steep terrain – there is a danger of slipping and injuring yourself. When changing the mowing direction proceed always crosswise, never vertically up and down. Do not use the lawnmower on slopes exceeding 15 %.
- ✿ Do not lift the lawnmower when starting the motor.
- ✿ Never place your hands or feet under the rotating parts. Maintain a sufficient distance from the expulsion opening.
- ✿ During operation, never pull it towards yourself, but always only push forward.
- ✿ Do not expose the lawnmower to rain. Do not mow wet or very damp grass.
- ✿ During work ensure you have a safe stance.
- ✿ Lead the machine only at walking speed.
- ✿ During operation (i.e. when the motor is turned on) never lift, carry or tilt from the mowed terrain - there is a danger of injury.
- ✿ Before lifting the lawnmower for transportation reasons, turn off the motor, and wait until the blade has come to a complete stop.
- ✿ If it is necessary to tilt the lawnmower for transportation reasons, when travelling over areas that are not grass and when transporting the lawnmower to the work position and back, turn off the motor.
- ✿ When starting the motor do not tilt the lawnmower, if it is not necessary to lift the mower when advancing forward. In such a case tilt it only to the extent necessary, and lift it on the side more distant from the user.
- ✿ Turn off the motor when leaving a lawn area.
- ✿ Only store and use the product away from flammable or volatile materials and solutions.
- ✿ Keep the product away from extreme temperatures, direct sunlight and excessive humidity. Do not use in an overly dusty environment.
- ✿ Do not spray the product with water or any other liquid. Do not pour water or any other liquids into the product. Do not submerge the product in water or any other liquid.
- ✿ Never leave the appliance switched on without supervision.
- ✿ Do not touch machine parts until they have come to a complete stop. The blades continue to rotate after the machine has been turned off and may cause injury.
- ✿ Allow the motor to cool down before storing the lawnmower in a closed room.
- ✿ Under no circumstances should you try to repair or amend the appliance on your own - danger of electric shock! Entrust all repairs and adjustments of this product to an authorized service centre. Tampering with the product during the warranty period may void the warranty.
- ✿ The manufacturer is not responsible for damages caused by incorrect use of this product or its accessories. Such damages include food spoilage, injuries, burns, scalding, fire, etc
- ✿ Never operate the engine when fuel tank is with fuel only.

- ✿ Never open the cap of the fuel tank to add gasoline while the engine is running or still hot.
- ✿ Tighten the fuel tank cap and close tightly the jerry can cap.
- ✿ Stop the engine and disconnect the spark plug in following cases:
 - before clearing blockages,
 - before unclogging chute,
 - before checking, cleaning or working on the lawnmower.
 - after striking a foreign object, inspect the lawnmower for damage and make repairs before restarting and operating the lawnmower.
 - if lawnmower starts to vibrate abnormally (check immediately).
- ✿ Keep in mind that the operator is responsible for accidents or hazards that occur to people or their property.
- ✿ Do not attempt to make cutting height adjustments while the engine is running.
- ✿ Grass catcher components are subject to wear, damage, and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts, when necessary.
- ✿ Mower blades are sharp and can cut. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.
- ✿ Do not change the engine governor setting or over-speed the engine.
- ✿ Disengage all blades and drive clutches before starting the engine.
- ✿ Use extreme caution when reversing or pulling the lawnmower towards you.
- ✿ Stop the blade(s) if the lawnmower has to be tilted for transportation when crossing surfaces other than grass.
- ✿ Disengage all blades and drive clutches before starting the engine.
- ✿ Start the engine or switch on the motor carefully according to instructions and with feet well away from the blade(s).
- ✿ Do not tilt the lawnmower when starting the engine or switching on the motor, except if the lawnmower has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part which is away from the operator.
- ✿ Do not start the engine when standing in front of the discharge chute.
- ✿ Never pick up or carry a lawnmower while the engine is running.
- ✿ Reduce the brake setting during engine shut down and, if the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing.
- ✿ Go slow when using a trailing seat

SAFETY INSTRUCTIONS – Fuel

- ⚠ ATTENTION:** Petrol is highly flammable.
- store fuel in containers specifically designed for this purpose;
 - refuel outdoors only and do not smoke while refueling.
 - do not smoke while refueling;
 - never remove the cap of the fuel tank or add petrol while the engine is running or when the engine is hot;
 - if petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapour have dissipated;
- ✿ While transporting the lawnmower makes sure the fuel tank is empty.
 - ✿ Transport fuel only in approved cans.
 - ✿ Regularly check the cap of the fuel tank. It must be tight to prevent leaking the fuel.

- ✿ Protect the environment: Be careful not to fuel leakage and contamination of soil materials.
- ✿ Do not refuel the gasoline in enclosed, poorly ventilated rooms. It can be very dangerous. Risk of fire.
- ✿ Do not inhale vapors from the fuel. Refuel with protective gloves.

7. MAINTENANCE AND STORAGE

MAINTENANCE

 **Note:** Regular, careful maintenance is essential for keeping the safety level and original performance of the machine unchanged in time.

- ✿ Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition. Regular maintenance is essential for safety and performance.
- ✿ Never store the equipment with fuel in the tank inside a building where vapour may reach a flame or a spark or a source of extreme heat.
- ✿ Allow the engine to cool before storing in an enclosed space.
- ✿ To reduce the fire hazard, keep the engine; exhaust silencer, battery compartment and fuel storage area free of grass, leaves, or excessive grease. Do not leave containers with grass cuttings in rooms.
- ✿ Replace worn or damaged parts for safety reasons; do not use the equipment with worn or damaged parts. Parts are to be replaced and not repaired. Use genuine spare parts (blades should always bear the symbol). Parts that are not of the same quality can damage the equipment and be dangerous for your safety.
- ✿ If the fuel tank has to be drained, this should be done outdoors and when the engine is cool.
- ✿ Wear strong work gloves when removing and reassembling the blade.
- ✿ Check the blade's balance after sharpening.
- ✿ Check the self-closing guard and grass-catcher frequently for wear and deterioration.
- ✿ Whenever the machine is to be handled, transported or tilted you must:
 - wear strong working gloves;
 - grasp the machine at the points that offer a safe grip, taking account of the weight and its distribution

CLEANING

- ✿ Carefully clean the machines with water after each cut; remove the grass debris and mud accumulated inside the chassis to avoid their drying and thus making the next start-up difficult.
- ✿ The paintwork on the inside of the chassis may peel off in time due to the abrasive action of the cut grass; in this case, intervene promptly by touching up the paintwork using a rustproof paint to prevent the formation of rust that would lead to corrosion of the metal.
- ✿ Remove the transmission casing by removing the screws and clean around the transmission and drive belts with a brush or compressed air once or twice a year.
- ✿ Once every season, the drive wheels should be cleaned internally. Remove both wheels. Clean the gear wheel and the wheel gear rim of grass and dirt using a brush or air compressor.

CHANGING BLADES (see pic. 6)

To replace the blade, undo the screw. Empty the oil tank before removing the blade.

Reinstall as illustrated. Tighten the screw properly. Tightening torque 40 Nm. When replacing the blade, the blade screw should also be replaced.

Changing the Oil (see pic 8)

- ✿ The oil drain plug is located under engine.
- ✿ Have a container ready to catch the oil and remove the drain plug.
- ✿ Once the oil has been emptied, replace the drain plug making sure that the washer is in place and wipe clean any spillages.
- ✿ Refill with SAE30 oil.
- ✿ When the dipstick is rested on the filler pipe (i.e. not screwed in place), the oil lever must be between the Min. and Max. marks on the dipstick. Do not overfill.
- ✿ Start the engine and allow it to run briefly.
- ✿ Stop the engine, wait one minute and check the oil level. Top up if necessary.

SPARK PLUG (see pic. 9)

Once the engine has cooled, remove the spark plug using the box spanner supplied; clean the plug with a wire brush. Using a feeler gauge, set the gap to 0.75 mm (0.030"). Refit the spark plug taking care not to over tighten.

AIR FILTER (see pic. 11)

Unclip the air filter cover and remove the sponge filter element. To avoid objects falling into the air intake, replace the air filter cover.

DRAINING THE FUEL TANK AND CARBURETOR (see pic. 10)

1. Place an approved gasoline container below the carburetor, and use a funnel to avoid spilling fuel.
2. Remove the drain bolt, and then move the fuel valve lever to the ON position
3. After all the fuel has drained into the container; reinstall the drain bolt and washer. Tighten the drain bolt securely.

STORAGE

The same petrol must not remain in the tank for more than one month. Thoroughly clean the mower and store it indoors in a dry place.

THE ENVIRONMENT

In order to protect the environment, we recommend that the following points should be given special consideration:

- ✿ Always use pure unleaded petrol.
- ✿ Always use a funnel and/or petrol can with a level control to avoid spillage when refilling the fuel tank.
- ✿ Do not fill the fuel tank completely.
- ✿ Do not overfill with engine oil.
- ✿ When changing the oil, ensure that all the used oil is collected. Avoid spillage. Take the used oil to a recycling unit.
- ✿ Do not dispose of used oil filter in a rubbish bin. Take it to a recycling unit.
- ✿ Replace the silencer if faulty. When carrying out repairs, always use original spare parts.
- ✿ Always seek professional help when the carburetor requires adjustment.

- ☼ Clean the air filter according to the directions.
- ☼ When, after many years of service, your machine needs to be replaced or is no longer required, we recommend that the machine is returned to your distributor for recycling.

Genuine spare parts are supplied by service workshops and by many dealers. We recommend that you take the machine to an authorized service station for annual servicing, maintenance and inspection of safety equipment. For service and spare parts, please contact the dealer where the machine was purchased.

REGULAR SERVICE PERIOD

REGULAR SERVICE PERIOD		Before each use	First Month or	Every 3 Months or	Every 6 Months or	Every Year or	Every Two Years	Correction
Perform at every indicated month or operating hour interval, whichever comes first			5 Hrs	25 Hrs	50 Hrs	100 Hrs	250 Hrs	
Engine oil	Check	○						See manual
	Replace		○		○			See manual
Air cleaner	Check	○						See manual
	Replace			○				See manual
Spark plug	Check, adjust					○		See manual
	Replace						○	See manual
Flywheel brake pad (A types)	Check				○			Service
Fuel tank and filter	Clean					○		Service
Fuel tube	Check	Every 2 years (Replace if necessary)						Service
Valve clearance	Check, adjust							Service
Combustion chamber	Clean	After every 200 hours						Service

8. TECHNICAL SPECIFICATIONS

Model No	FZR3004-B / FZR 3007 BS
Petrol engine:	2.7KW / 2.7KW
Engine speed:	2850/min / 2880/min
Cutting width:	508mm / 456mm
Adjustable cutting height:	6 positions / 6 positions
Gross collection capacity:	65 l / 65l
Gross weight	37kg / 33.6kg
Sound Pressure Level	83,5 dB (A)/83,5 dB (A)
Guaranteed Sound Power Level	98 dB (A)/98 dB (A)
Vibration6,9 m/s / 6,9 m/s

Maintenance of the battery

Please disconnect the battery from the machine after using

Battery capacity 12V 7AH

9. WHAT TO DO „WHEN...“

Engine will not start	Possible Cause	Correction
1. Check fuel.	Out of fuel.	Refuel.
	Bad fuel; engine stored without treating or draining gasoline, or refueled with bad gasoline.	Drain the fuel tank and carburetor. Refuel with fresh gasoline.
2. Remove and inspect spark plug.	Spark plug faulty, fouled, or improperly gapped.	Replace the spark plug.
	Spark plug wet with fuel (flooded engine).	Dry and reinstall spark plug.
3. Take engine to an authorized our servicing dealer, or refer to shop manual.	Fuel filter clogged, carburetor malfunction, ignition malfunction, valves stuck, etc.	Replace or repair faulty components as necessary.

Engine will not start	Possible Cause	Correction
1. Check air cleaner	Air cleaner elements clogged.	Clean or replace air cleaner elements.
2. Check fuel.	Bad fuel; engine stored without treating or draining gasoline, or refueled with bad gasoline.	Drain the fuel tank and carburetor. Refuel with fresh gasoline.
3. Take engine to an authorized our servicing dealer, or refer to shop manual.	Fuel filter clogged, carburetor malfunction, ignition malfunction, valves stuck, etc.	Replace or repair faulty components as necessary.

10. DISPOSAL

The lawnmower and its accessories are manufactured from various materials, e.g. metal and plastic. Take damaged parts to a recycling centre. Inquire at the relevant government department.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

FOR BUSINESS ENTITIES IN THE EUROPEAN UNION



This symbol is valid in European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller. This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes