User's manual





Before first use, please read all instructions contained in this user's manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

Save the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this product for repair).

**SIK 5000BK** 

## **TABLE OF CONTENTS**

IMPORTANT SAFETY NOTICE	.3
INTRODUCTION	. 6
DESCRIPTION OF THE APPLIANCE	
INSTRUCTIONS FOR USE	
CLEANING AND MAINTENANCE	
TECHNICAL SPECIFICATIONS	
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT	٤.

**SIK 5000BK** 

## **IMPORTANT SAFETY NOTICE**

- Carefully unpack the product and take care not to throw away any part of the packaging before you find all the parts of the product.
- This product must not be used by persons (including children)
  with physical or mental impairments or by inexperienced
  persons, unless properly trained or schooled in the safe
  use of the product, or unless they have been properly
  supervised by a qualified person who will be responsible
  for their safety.
- Under no circumstances should you try to repair or amend the product on your own - danger of electrical shock! Entrust all repairs and adjustments to a specialised company/service. Tampering with the product during the warranty period may void the warranty.
- Never use the product if you have wet hands or feet.
- Only store and use the product away from flammable or volatile materials and solutions.
- Keep the product away from extreme temperatures, direct sunlight and excessive humidity. Do not use in an overly dusty environment.
- Do not place the product near heaters, open fires or other appliances or equipment that are sources of heat.
- This product is designed only for domestic use. Do not use it in industrial surroundings!
- Do not use the product for purposes other than those intended.
- Before connecting the product to a power socket, ensure that the voltage on the rating label is the same as that in your power socket.

**SIK 5000BK** 

- Do not place the power cord near hot surfaces, or over sharp objects. Do not place heavy objects on the power cord.
   Position the power cord so that it will not be stepped on or tripped over. Make sure the power cord is not touching a hot surface.
- If the product's power cord is damaged, have an authorised service or qualified person replace it, in order to prevent hazards. It is forbidden to use a product with a damaged power cord or plug.
- Do not disconnect the power cord from a power socket by pulling on the cord.
- Do not spray the product with water or any other liquid.
   Do not pour water or any other liquids into the product.
   Do not submerge the product in water or any other liquid.
- Never use the product near a bathtub, wash basin or any other container filled with water.
- When not using the product, or when not planning to use it, turn it off and disconnect the power cord from the power socket. Prior to cleaning, proceed in the same manner.
- Be especially careful when the product is used near children. Always keep the product out of children's reach. Children must be supervised to ensure that they do not play with the product.
- Never place the product on a inclined surfaces.
- Never insert metal or any other objects into the product danger of injury by electrical shock!
- Never leave the product in operation without attaching the base - danger of injury by electrical shock!
- The manufacturer takes no responsibility for damages caused by the incorrect use of this product and its accessories (injuries, burns, scalding, fire, food spoilage, etc.).

**SIK 5000BK** 

- This product is not suitable for use in barns, stables and similar locations.
- The appliance must not be used in locations where there is a likelihood of flammable fumes or explosive dust being present.
- Never leave the power cord tangled or otherwise bent or wound around the appliance.
- When the appliance is running, do not touch the grill with a finger, risk of injury by electrical shock.
- Do not touch the grill with a conductive rod even when the product is turned off. The reason for this is the presence of a weak electrical charge. Use an insulated rod to interrupt the circuit and to release the charge.





ATTENTION!

DANGER OF INJURY BY ELECTRICAL SHOCK

**SIK 5000BK** 


### INTRODUCTION

The Sencor SIK 50 Electric insect killer is an indispensable helper anywhere, where there is an excessive amount mosquitoes and other annoying insects. It is equipped with two special 4W tubes emitting blue ultraviolet light, which attracts the insects inside, where they are subsequently killed by high voltage on the protective grill.

#### Several tips for effective operation

- 1) The insect killer should be located in a location where insects enter from the outdoors into a room and in locations, where the insects will react to the light of the insect killer.
- 2) The recommended installation height is up to 2 meters, but for reasons of easy operation and maintenance the lower it is the better and also because insect activity is higher near the floor (insect killers located at a height of 1.5 m are 4x to 10x more effective).
- 3) The best effect is achieved by locating the insect killer in a dark corner so that the blue light is more distinctive. The effectiveness of the insect killer can be negatively affected by the intensity of other light sources, whether artificial or day light so we recommend that it is located where there is a minimum concentration of these sources.

### **DESCRIPTION OF THE APPLIANCE**

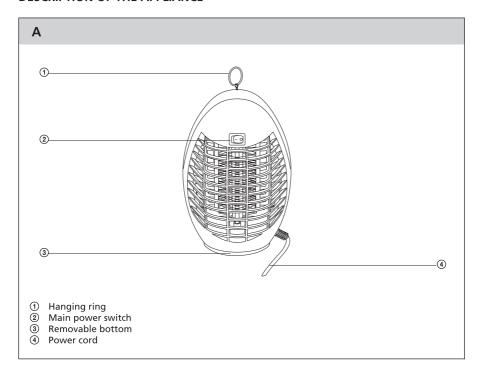

**SIK 5000BK** 

### **INSTRUCTIONS FOR USE**

#### **Putting into operation**

- 1) It is optimal to hang the electric insect killer using the hanging ring in a dark corner.
- 2) Check that the voltage in your electricity grid corresponds to the voltage specified on the rating label.
- 3) Insert the power plug into a power socket.
- 4) Move the main switch to position "1".



#### Attention

The product is not designed for outdoor use and in no case should it be exposed to for example rain. If you need to install it for example on the terrace, it is essential that you install it under the roof!

#### **CLEANING AND MAINTENANCE**



#### Attention

Before cleaning, disconnect this appliance from the power source.

- 1) Locate the electric insect killer above a rubbish bin.
- 2) Turn the insect killer on its side and shake it gently to tip it out into a bin.
- 3) Never turn the insect killer upside down!



#### Attention

Never wash the product under running water.

To clean the outer parts of the product, use a soft cloth dipped in lukewarm water. Do not use aggressive cleaning products and solvents as this could damage the surface of the appliance.



#### Attention

In the event of a malfunction of light tubes, please contact an authorised service centre, replacement may only be performed by an authorised service centre.

SIK 5000BK

### **TECHNICAL SPECIFICATIONS**

Nominal voltage	
Rated frequency	50/60 Hz
Rated power	2x 4 W
Voltage at the electrodes	1600 V
Safety class (with regard to electrical shock protection)	II
Length of the power cord	2.7 m
Operating range	
Lifetime of the tube	5000 hours
Dimensions (width x depth x height)	147 x 93 x 221 mm
Weight	0.38 kg
3	3

Changes to text and technical parameters reserved.

# INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of EU directives related to it.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make these changes.