SENCOR®

SPV 7910T

PORTABLE DVD PLAYER WITH 9“ LCD DISPLAY AND DVB-T TUNER

PŘENOSNÝ DVD PŘEHRÁVAČ S 9“ (23 cm) LCD OBRAZOVKOU A DVB-T TUNEREM

PRENOSNÝ DVD PREHRÁVAČ S 9“ (23 cm) LCD OBRAZOVKOU A DVB-T TUNEROM

USER’S MANUAL
NÁVOD K OBSLUZE
NÁVOD NA OBSLUHU

EN CZ SK

Content

Important Safety Instructions 2
1. Description of the device 7
2. Remote Control 8
3. Connection 10
4. DVD Player 11
4.1 DVD Menu 11
4.1.1 Language Setup 11
4.1.2 Audio Setup 11
4.1.3 Custom Setup 12
4.1.4 Exit 13
4.2 System Setting 13
4.2.1 Language setup 13
4.2.2 Display Setup 13
4.2.3 Preference 14
5. MPEG4/MP3 File Playback 15
6. Kodak Picture CD Playback 16
7. DVB-T 17
7.1 The First Installation 17
7.2 Main Menu 18
7.2.1 Program List 18
7.2.2 Program Search 19
7.2.3 Parental Control 20
7.2.4 System Setting 20
8. Troubleshooting Guide 22
Technical Specifications 24

If you want to use this product correctly, carefully read this user's manual and store it for future reference.

General safety instructions

- Read this user's manual. Keep the user's manual in a safe place for future reference. If you give this product to a third party, hand over the user's manual together with the product.
- Follow the instructions contained in this user's manual.
- Heed all warnings.
- Adhere to all instructions.
- Use only accessories recommended by the manufacturer.
- An open flame must not be placed on the product, e.g. burning candle.
- Use the product in a temperate climate zone.
- Neither the manufacturer nor the seller of the device under no condition takes responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, service or cleaning of this device as described in this user's manual.
- Protect the device against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
- Before allowing children to use the device, they must be appropriately to their age, informed about the correct and safe use of the player.

Installation, operation

- Install the device according to the instructions in the user's manual.
- Leave free space on all sides of the device, necessary for proper air circulation. This removes the heat created during operation. Covering the ventilation openings of the device's case creates a risk of overheating or damaging the device. It is necessary to ensure that the ventilation openings are not blocked, e.g. by a newspaper, table cloth, curtain, etc. Follow the installation instructions in the user's manual.
- Do not install the device in direct sunlight or near sources of heat, such as heaters, heat exchangers, stoves or other appliances (including amplifiers) producing heat. High temperatures significantly reduce the lifetime of electronic components in the device. Do not use or leave the device in the vicinity of an open fire.
- The device must not be exposed to dripping or running water and objects filled with water must not be placed on it, e.g. vases. Protect the device against rain, spray or contact with any other liquid, do not leave or install the device outdoors. Do not use the device outdoors. Not adhering to these instructions creates a risk of electrical shock or fire hazard.
- Do not use this device near water.
- Do not try to circumvent the polarised power plug safety feature. If the power plug cannot be inserted into your power socket, contact a qualified electrician to replace the old type of power socket.
- Before connecting the device into a power socket, check that the voltage in your power socket corresponds to the voltage on the rating label of the device or on its power adapter.
- Make sure that the power cord is not stepped on or compressed, particularly near the power plug, power socket and at the point where it exits the device or the adapter. The power plug (adapter) is used as a disconnection device and must be easily accessible.
- Remember to always disconnect the power plug (adapter) from the power socket before disconnecting the power cable from the back side of the device.
- Disconnect the device from the power socket during storms or if you will not be using it for a longer time.
- Avoid moving the device from a cold environment to a warm one or vice versa, or when using the device in a very humid environment. Air humidity may condense on some components

inside the case of the device and the device may stop working temporarily. If this occurs leave the device in a warm and well ventilated place and wait 1 – 2 hours until the moisture evaporates and the device can once more be used as usual. Take care especially during the first use of the player immediately after its purchase during a cold season.

Repairs and maintenance

- To prevent risk of injury through electric shock or the creation of a fire, do not take the device out of the case - there are no parts inside the case repairable or adjustable by the user without relevant equipment and qualifications. Should the device require adjustment or repair, contact a professional service centre.
- In the event of any unusual events occurring during the use of the device such as for example if there is a distinct smell of burning insulation or smoke comes out of the device, immediately turn off the device, disconnect the device from the power source and do not use the device until you have received the results of the inspection from the employees of the professional service centre.
- Have all repairs carried out by qualified personnel. Repairs are necessary if the device has been damaged in any way, for example if the power cord is damaged, liquid was poured on the device, foreign objects have entered the device, the device has been exposed to rain or moisture, if the device is not working as usual or if it has fallen.
- Clean the device only with a dry cloth.

Remote control and batteries

- Do not expose the remote control or the batteries to direct sunlight or sources of heat, such as heaters, heat exchangers, stoves or other appliances (including amplifiers) producing heat. Do not use or leave the device in the vicinity of an open fire.
- Neither the remote control nor the batteries may be exposed to dripping or running water and objects filled with water must not be placed on them, e.g. vases. Protect against exposure to rain, spraying or pouring of any kind of liquid. Do not use outdoors. Not following these instructions creates a danger of damage to the remote control or the battery.
- Do not use this device near water.
- It is necessary pay attention to the environmental impact aspects of battery disposal.
- The incorrect use of batteries may cause the leakage of the electrolyte and corrosion. To ensure that the remote control works correctly, proceed according to the instructions below:
  - Do not insert the batteries in the wrong orientation.
  - Do not recharge, heat, open or short circuit the batteries.
  - Do not throw batteries into a fire.
  - Do not leave discharged batteries in the remote control.
  - Do not combine various types of batteries or new and old batteries.
  - If you will not be using the remote control for a long period of time, remove the batteries to prevent potential damage caused by a subsequent battery leakage.
  - If the remote control is not working correctly or its operational range is reduced, change all batteries for new ones.
  - If electrolyte leaks out from the batteries, have the remote control cleaned by an authorised service centre.

Attention: To prevent a fire hazard or injury by electrical shock, do not expose this device to rain or humidity.

Attention: Batteries must not be exposed to excessive heat, for example sunlight, fire, etc.

This symbol indicates that there is dangerous voltage inside this device, which presents a risk of injury by electrical shock.

This symbol indicates important operating or repair instructions in the device's documentation.

This symbol indicates that the device has double insulation between the dangerous mains voltage and the parts accessible to the user. In the event of repairs use only identical spare parts.

Comments about USB connectors:

- USB flash drives must be connected directly to an appliance. To prevent data transmission failure or interference do not use USB extension cables. Electrostatic discharges may cause the device to malfunction. In such an event the user must restart the device.
- Before using the USB flash drive check that it communicates correctly with the device and its read/write data speed.
- To achieve maximum reading speed we recommend that you keep disk space defragmented. Use the FAT32 file system, a single partition, without protection. If reading and writing on the memory card is not continuous, undesirable effects may occur such as partial image loss (distortions/checkering effects) or complete image loss, audio defects, and in extreme cases the operation will be stopped. Unexpected behaviour of the connected flash drive, or the presence of viruses or other damaging software may cause the functions of the device to stop working, necessitating a restart.
- The USB connector is of the standard type and cannot power USB devices with a large power consumption (e.g. hard disks HDD). Use devices that have their own power supply and power them using their independent power supplies.
- The device was designed to achieve maximum compatibility with flash drives. Due to the variety of devices on the market it is not possible to guarantee compatibility with every USB device. In the event of difficulties try formatting the flash drive directly in the appliance. If problems persist, use a different flash drive.

Appendix to LCD TV Instruction Manual

Precautions When Still Image is Displayed, Red/Blue/Green/Black spots on the screen

A still image may cause permanent damage to TV screen

- Do not display still image on the LCD panel for more than 2 hours as it can cause screen image retention. This image retention is known as "screen burn". To avoid such image retention, reduce the degree of brightness and contrast of the screen during still image watching.
- Similar "screen burn" effect can appear on the LCD panel due to still TV channel logo displaying.
- Watching TV in 4:3, 14:9 or similar modes which doesn't cover whole screen for long period of time may leave traces of borders displayed on the left, right or center of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console can cause a similar effect to the screen.
- Displaying still images from video games and PC for longer than a certain period of time may produce partial after-images. To prevent this effect reduce the brightness and contrast when displaying still images.

  Damage caused by above reasons is not covered by the Warranty!

There may appear red spots, blue spots, green spots and black spots on the screen

- This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panels are built with very high precision technology giving you fine picture details. Occasionally a few non-active pixels may appear on the screen as fixed point of red, green, blue or black (up to 0.001% of total display pixels). Please note this doesn't affect the performance of your LCD TV.

Notes on Discs

Handling Discs

- Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc – for labelling discs use special soft tip markers designed for this use, write on the side of the disc with the label.

- After playing, store the disc in its case. Do not expose the disc to direct sunlight or source of heat and never leave it in a parked car exposed to direct sunlight or near a heat source; do not leave discs in closed vehicles parked in direct sunlight. Risk of disc deformation.

Cleaning Discs

- Fingerprints and dust on the disc can cause poor picture quality and sound distortion. To remove them wipe the disc with a soft lint free cloth before playing. When cleaning the disc proceed from the centre directly to the edge (not in circular motion).

- Do not use vinyl record anti-static sprays, petrol, ethanol or other solvents or thinners.

RW COMPATIBLE This indicates a product feature that is capable of playing DVD-RW discs recorded with Video Recording format.

Notes:

1. Depending on the recording media, recording method (used PC program used for the disc recording) and its finalisation, it is possible that it will not be possible to play some CD-R or DVD+/-RW/R discs.
2. Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
3. Use the player to play only circular discs - when playing irregular shaped discs there is a risk of damaging the disc or the player.
4. Some playback operations of DVDs and Video CDs may be intentionally programmed by software manufacturers. This unit plays DVDS and Video CDs according to disc content designed by the software manufacturer, therefore some playback features may not be available or other functions may be added.

Manufactured under license from Dolby Laboratories. „Dolby", „Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.

Region code

This player is designed for playing DVD video marked with region code 2 or ALL (discs labelled in this way can be played by all DVD players). The disc's region code is located on its label or cover, the player's region code is located on the back/bottom side of the player. After inserting a DVD with a different region code than mentioned above a message Check Region Code will be displayed on the screen and DVD playback will be rejected by the player.

Important notices:

This device uses a laser system. In order to learn about the correct operation of the device, please carefully read this user's manual and store it for future use.
For safety reasons the disc drive opening is located on the side of the device, thus preventing exposure to laser radiation. Under no circumstances should you in any way attempt to modify or change the disc drive opening. Do not look into the disc drive opening when inserting a disc into the disc drive or during playback. An emission of visible laser radiation could occur. Do not look into laser beams.

ATTENTION:

THIS DVD PLAYER IS A CLASS 1 LASER PRODUCT. WHEN USING THE CONTROL ELEMENTS OR CARRYING OUT SETTINGS AND PROCEDURES, WHICH ARE NOT INCLUDED IN THIS USER'S MANUAL YOU OR THOSE AROUND YOU MAY BE EXPOSED TO DANGEROUS LASER RADIATION. BECAUSE THE LASER BEAM USED IN THIS DEVICE IS DAMAGING TO HUMAN EYE SIGHT DO NOT ATTEMT TO DISASSEMBLE THE CASE OF THE DEVICE. LEAVE ALL REPAIRS TO A QUALIFIED SERVICE CENTRE

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

1. Description of the Device

1. LCD display
2. Speaker
3. Disc Top
4. PREV button
5. NEXT button
6. PLAY/PAUSE button
7. STOP button
8. SETUP button
9. EXIT button
10. MENU button
11. SOURCE button
12. Navigation buttons
13. OK button
14. Open Disc Top
15. LED POWER – IR - CHARGE
16. ANT IN 75 ohms
17. USB connector
18. VOLUME buttons
19. AV OUT
20. Phone Jack (Maximum output 150 mV)
21. DC 12 V IN Jack
22. POWER switch
23. SD Memory Card Slot

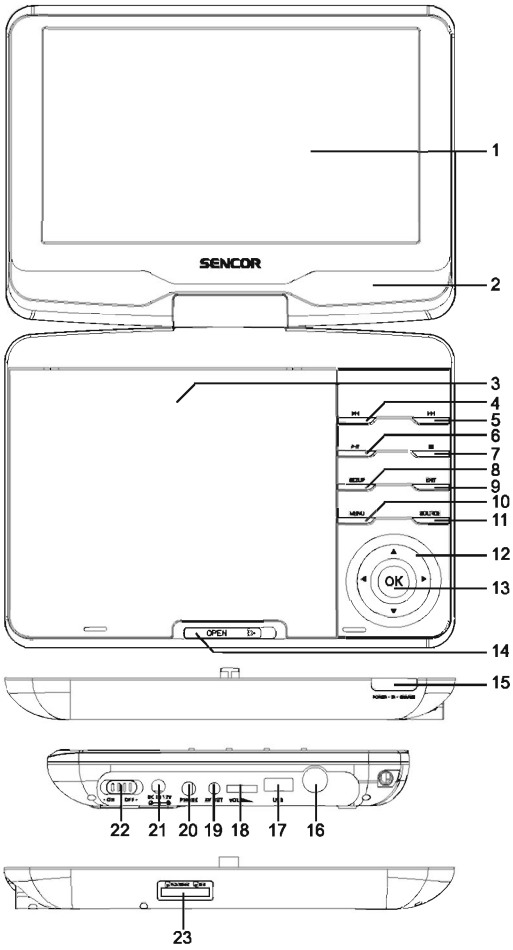

2. Remote control

1. DISPLAY button
2. SPEAKER button
3. Power button
4. Numeric buttons
5. GOTO button
6. PLAY/PAUSE button
7. STOP/NEXT button
8. TV/RADIO button
9. EXIT button
10. ZOOM/EPG button
11. PREV button
12. NEXT button
13. TITLE button
14. ANGLE button
15. PROG button
16. RANDOM button
17. REV button
18. FWD button
19. SOURCE button
20. Navigation buttons ▲/▼/▶/◀
21. ENTER button
22. SETUP button
23. REPEAT/FAV button
24. AUDIO button
25. SUBTITLE button
26. MENU button
27. MUTE button

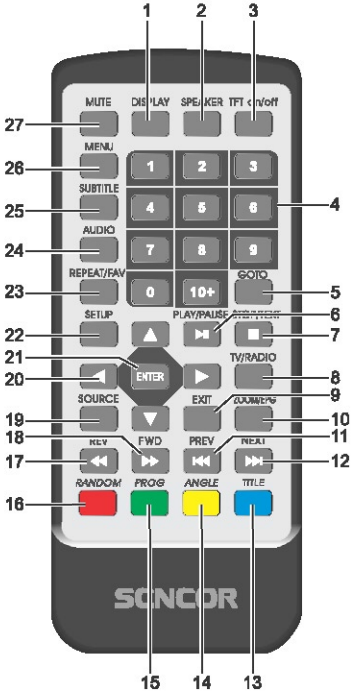

Use of the remote control

- To control the device using the remote control, point the remote control at the device and then press the button with the required function. The maximum range of the remote control is about 5 meters with a deviation of up to +/- 30° from the perpendicular direction to the reception sensor of the remote control on the front side of the device. The falling capacity of the batteries gradually reduces the remote control range.
- There must be no solid obstacles in the area between the remote control and the device when the remote control is being used. During standard use the lifetime of batteries in the remote control is about 1 year. When the effective ranges of the remote control is substantially reduced or when there are problems with its use, change both the batteries in the remote control.
- If you do not use the remote control for a longer period of time, take out both batteries from it - in this way you will prevent potential damage caused by their leakage.

2. Remote control

Changing batteries in the remote control

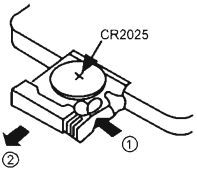

To power of remote control is used Lithium battery CR2025.
To change the battery, follow the instruction:

1. Press holder battery lock to the left and pull out holder from the remote control.
2. Take out an empty battery from the holder.
3. Place a new battery, make sure symbol + (on battery) is facing upwards. Then push back the holder with battery.

Note:
Remove the batteries if you are going to store the device or you do not use it for a long time.

Built-in Rechargeable Battery Management

The capacity of built-in rechargeable Lithium Polymere battery is 1300mAh, which can provide about 1.5 hours of operation.
This portable TV used a smart battery management system inside which can support low battery detection.

1. If the battery voltage falls below a specific value, the unit will enter low battery mode, displaying a flashing low battery icon in the OSD, indicating the user needs to recharge the TV immediately.
2. If the AC/DC adapter is connected, it will supply the unit with power, and the battery will be charged automatically, whatever the power switch is ON or OFF.
3. If the user keep on watching without connect with the fi tted DC adaptor, after the battery exhausted, an empty battery icon will display and blink at the left up corner, the TFT screen will turn into black instead of display the picture and the audio will be muted. But the system is still working, if the user plug the DC adaptor at this time in time, the system will back to normal working mode, the video and audio will reproduce again.

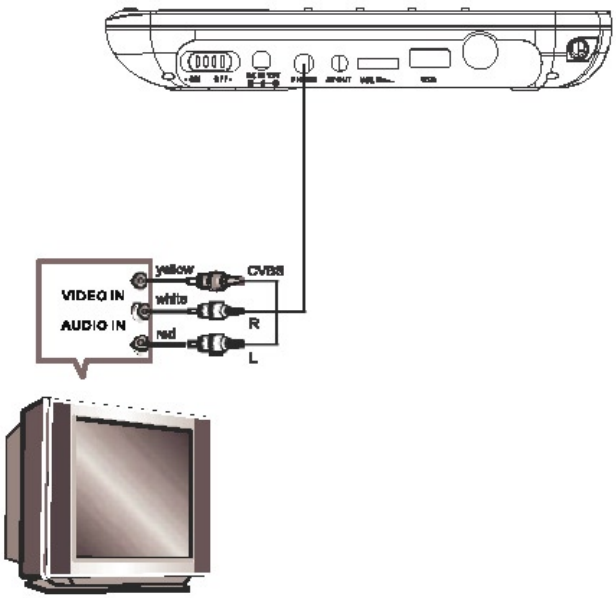

USB Connection

The device is provided with a slot to connect an USB memory device to play the MP3 music and JPEG pictures or other supported files.

Insert the USB memory device to the device.

Important notice:

- The device supports only USB flash memories. Do not insert MP3 players or other devices with the same jack, not even using USB cable, to the USB slot.
- When inserting, make sure you insert the USB memory device correctly. Otherwise you can damage the USB memory device or the appliance.

4. DVD Player

General setup

In DVD mode, press **STOP** button and then **SETUP** button. The main menu will appear on the screen.

4.1 DVD Menu

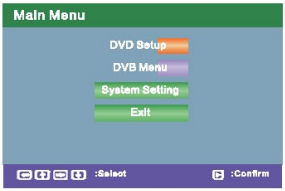

4.1.1 Language Setup

Press ▲/▼ to select **Language Setup** item and press **ENTER** button to enter the menu. The submenus will be displayed.

Menu

Highlight MENU option and select the menu language. Press **ENTER** to confirm. If you call a menu during disc playback, it will appear in the selected language.

Note:

If your preffered language is not available, the default language of the disc will be used.

Audio

Hightlight AUDIO option and select the audio language. Press **ENTER** to confirm.

If the audio language of the disc you are playing is available, it will be used. If the preffered language is not available, the default language of the disc will be used.

External Subtitle

Hightlight External Subtitle option and select the subtitle language that will be used when playing MPEG4 format discs.

4.1.2 Audio Setup

Press ▲/▼ buttons to select **Audio Setup** item and press **ENTER** button to enter the menu. The submenus will be displayed.

Downmix

This function will allow you to decrease the number of channels using downmix function. You can use Lo/Ro or Lt/Rt.

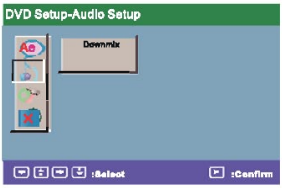

4.1.3 Custom Setup (Nastavení podle uživatele)

Press ▲/▼ buttons to select **Custom Setup** item and press **ENTER** button to enter the menu. The submenus will be displayed.

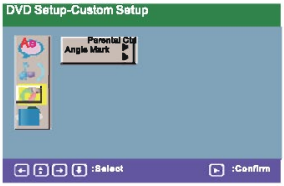

Parental Control

This function allows you to restrict the access of children or teens to DVD with inappropriate content (sex, violence etc). This function uses restriction levels (part of some DVD records). After specifying the restriction level using this function, if you insert a disc with higher restriction level, you will be asked to insert a valid password. The default password is **6666**. If you do not insert the password or you insert wrong password, DVD playback will be withdrawn.

When you insert correct password, the range of restriction levels to resctrict the access of children and teens to inappropriate DVDs. Confirm the selected level using ENTER button.

Press EXIT button repeatedly to leave the menu.

You can select from the following levels: 1; 2:G; 3:G; 4:PG13; 5; 6:R; 7:NC17; 8.

Angle Mark

Function to specify whether to display a camera icon on the screen – it informs user about the multi-angle shots.

Choose **ON** to display the camera icon on the screen, otherwise choose **OFF**.

Press **ANGLE** button on the remote control to enter multi-angle shots directly.

Note:

The availability of multi-angle shots depends on the DVD disc. Not all DVDs support this function.

4.1.4 Exit

Press ▼ to select **Exit** item and press **EXIT** button to return to the main menu.

4.2 System Setting

Press **SETUP** button to display the main menu. Press ▼ to select **System Setting** item.

4.2.1 Language setup

Press ▲/▼ to select **Language Setup** item and press **ENTER** button to confirm. The submenus will be displayed.

OSD Language

Hightlight **OSD Language** option and select the desired OSD. Press **ENTER** button to confirm.

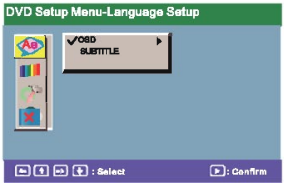

Subtitle

Hightlight **Subtitle** option and select the desired subtitle language. Press **ENTER** button to confirm. If the disc you are playing contains the selected language, it will use it.

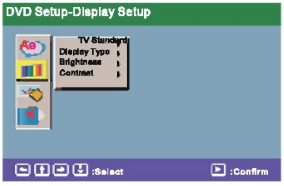

4.2.2 Display Setup

Press ▲/▼ buttons to select **Display Setup** item. Press **ENTER** to confirm. The submenus will be displayed.

TV Standard

Function to set the TV system for video signal output of the used TV set. Press **ENTER** to confirm.

Display Type

According to the display type, choose the aspect ratio of the TV: **4:3 PS; 4:3 LB; 16:9**. Press **ENTER** to confirm.

Brightness
Function to set the picture brightness, choosing from **Normal**, **Bright** or **Soft**. Press **ENTER** to confirm.

Contrast
Function to set the picture contrast.

4.2.3 Preference
Press ▲/▼ buttons to select **Preference** item and press **ENTER** to confirm. The submenus will be displayed.

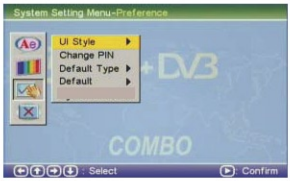

UI Style
Function to specify the UI style, choosing from: Style 1 – Style 4.

Change PIN
Function to change the password (default password is **6666**).

Default Type
Use this function to setup the default device mode:
- DVD MODE – DVD player
- DVB MODE –DVB-T
- CARD READER MODE – memory card reader
- USB MODE – USB jack
- USER SELECT MODE

When **Last Operation Type** selected, the device will be switched to the last set mode before switched off.

Note:
If you select DVB mode, the device will enter DVB mode after switching on and off respectively. The chart will not be displayed in such case.

Default
When selecting this function, the system will restore the default factory setting.

5. MPEG4/MP3 File Playback

When MP3 disc loaded, the screen will display the following:

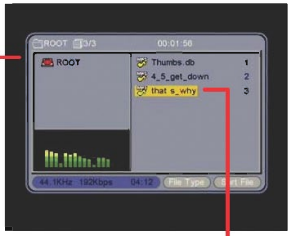

The screen will display two windows. To toggle between windows, use ▶/◀ buttons and to move in the folder/file window, use ▲/▼ buttons.

Notes:

The player will not work correctly under the following condition:

- If the dics is badly scratched, damaged or dirty;
- When playing non-finalized disc;
- If the recorded format is not supported by the player.

6. Kodak Picture CD Playback

The disc signed as Kodak Picture CD has the size and shape of regular CD. You can order a KODAK Picture CD simply by checking the box on the photo finishing envelope when you drop off a roll of film (35mm or Advanced Photo System(APS) color print film) at the time of processing in Kodak Express store displaying Kodak Picture CD sign. When your order is returned, you receive your prints, negatives, and your full roll of pictures safely stored on your KODAK Picture CD. Each KODAK Picture CD brings you the tools to enhance, share and manage your pictures on your computer. You also can record the JPEG picture into CD-R or CD-RW with the CD-Rewriter yourself.

Notes:

- The max size of JPEG pictures supported by player: 3840 x 3840 pixels.
- JPEG is the abbreviation of the expert group composed of representatives of manufacturers of digital cameras (camcorders) and users.
- After inserting Kodak Picture CD with picture files into the player, the system will automatically play picture Slide Show – the pictures will be displayed on full screen.

7. DVB-T

7.1 First Time Installation

Make sure that all connections have been made correctly.

Switch on the TV and check the antenna connection to the player. The press POWER button to turn on the player and press FUNCTION button to DVB MODE.

When you turn on the device to the DVB mode for the first time, the First Time Installation menu will appear on the screen. Using the menu you can make the necessary settings to watch TV. Use the remote control to operate the menu.

1. At the First Time Installation choose **Yes** and press **ENTER** to continue in installation.
2. Use the following screen to set **Country**, **Language** and **Time Zone**. To continue press **ENTER** button.
3. Select **Yes** to start the automatic channel search.
4. You can watch the process of channel searching on the screen. If you want to stop searching, press **RETURN** button.
5. When finished, all found channels will be stored to the channel list and the system will display the last found channel.

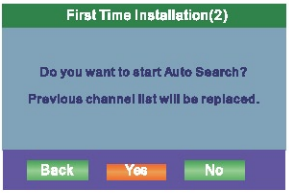

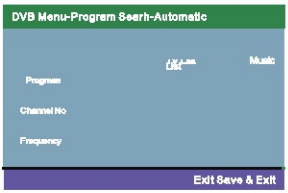

7.2 Main Menu

Press SETUP button to display the DVB-T main menu. Press ▼ to select DVB-T submenu.

7.2.1 Program List

Press ▲/▼ to select **Program List** option and press **ENTER** button to enter.

TV Program

Press ► button to hightlight **TV Program** function and press **ENTER** to confirm. Function options will be displayed on the screen. All active programs are listed in the Program List, allowing you to make your own Favorite channel group, move, or delete channel.

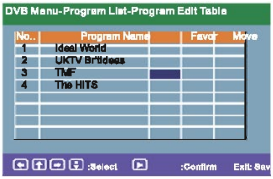

Add program to Favorite list

- Choose the program you want to add to the favorite list.
- Go to **Favor** column in the favorite list.
- To highlight the **Favor** column of the desired channel press **ENTER** button- a red heart symbol will be displayed, indicating the channel was added to the favorite list.
- Press **ENTER** button to cancel the operation.
- Press **FAVORITE** for quick access to the favorite list.

Move a channel

- Choose the program you want to move in the channel list and go to the **Move** column.
- Press **ENTER** button – a symbol ↓↑ will be displayed.
- Use ▲/▼ buttons to move the selected channel to the desired place in the channel list.
- Press **ENTER** button to leave the move menu.

7. DVB-T

Delete a channel

- Choose the channel you want to delete and go to the **Del** column.
- Press **ENTER** button – a symbol **X** will be displayed. Repeat the process to mark all channels you want to delete.
- Press **SETUP** or **RETURN** button to delete the marked channels from the channel list.
- Press **SETUP** button to leave the menu.

Music Program

Press ▼ button to highlight **Music Program** function and press **ENTER** button to confirm.

Note:

Using this fuction is the same as using **TV program** function, described above.

Sort

Press ▼ button to highlight **Sort** function and press **ENTER** to confirm.

You can sort the TV channels in the channel list according to the desired option: **By Name, By Channel Number, By LCN**.

7.2.2 Program Search

Press ▲/▼ buttons to select **Program Search** function and press **ENTER** to confirm.

When entered this function, the following program searching options will be displayed **Automatic Search** and **Manual Search**.

Automatic Search

The process of automatic search is the same as the process of channel search in the First Time Installation menu. Follow the instruction above.

Manual Search

You can use this type of channel searching to find new TV channels or to add the channels which were not stored when using automatic searching. To find a channel using the manual search, you should know the channel parameters, e. g. channel number. The TV channels found by manual searching will be stored at the end of the channel list.

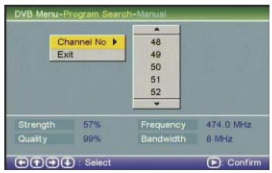

Follow these instructions to operate the manual search menu:

- Press **ENTER** button once highlighted the Manual Search via **Main Menu – Program Search – Manual Search**.
- Press ▲/▼ to enter the channel number into **Channel No** field. The values of **Frequency** and **Bandwith** data will be changed.
- Press **ENTER** button to start the scanning.
- The found channel will be added to the end of the channel list. If no signal, a dialog message will be displayed on the screen.

7.2.3 Parental Control

This function is intended to restrict the access to the desired TV channels (e. g. channel which are not suitable for children and teens).

Follow these instructions to operate this function:

- Select **Parental Control** function. To enter this function, you should enter the valid password (default is **6666**). Press **ENTER** to confirm.
- When inserted the correct password, you can use the following functions:

  Channel Lock – selecting **YES**, you can lock all channels in the displayed channel list.

  Parental Setting – select the channel you want to lock and then press **ENTER** button. A lock symbol will be displayed next to the channel, indicating the channel is locked.

  To unlock the channel, press **ENTER** button again.

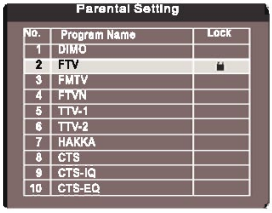

7.2.4 System Setting

Country

Use this function to specify the installation country and some parameters will be set automatically, e. g. TV picture and audio system.

7. DVB-T

Language

Press ▼ to select **Language** option and then press **ENTER** button to confirm. You can set the following functions:

1st/2nd Audio

Function to select the audio languages. If the 1st audio language is not available, the 2nd option will be used automatically.

Subtitle

Function to selecte subtitle language. If the system does not support the selected subtitle language, the system will use the default language automatically.

Press **ENTER** button to leave the menu.

GMT Usage

This function allows using the world time to set clock (local time). If you turn on the function (ON), enter the GMT difference into the desired field (in Central Europe 1 h, summer time + 2 h).

If you turn off the function (OFF), enter the local time to the desired field.

Time Zone

To display the local time correctly, it is necessary to enter the correct time zone. Both EPG and system schedule require a correct time zone setting.

System Schedule

Press ▼ to selecte the function and press **ENTER** to confirm. The diplay will show fiels to enter up to 10 timer tasks, allowing you to schedule the time of automatic start and to switch to the desired TV channel at pre-set time..

- Press ▲/▼ to selecte the line to enter the parameters of program schedule and using ►/◄ active or inactive the program.
- Press **ENTER** button to enter the submenu. Using ▲/▼ select item and press ►/◄ buttons to switch between available selection and numeric value.
  - **Mode** – to program the tasks repeat by selecting: **Once; Daily; Weekly**.
  - **Start Time** – to enter the start time;
  - **End Time** – to enter the end time;
  - **Stop** – to disable the program;
  - **Channel Type** – to select **TV** or **Radio** channel;
  - **Channel No** – to specify the program no from the channel list.
- Press **RETURN** or **SETUP** to save the schedule program.

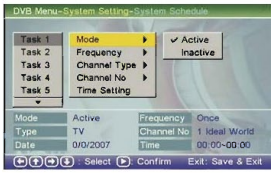

8. Troubleshooting Guide

If you have any questions regarding the device operation, you can consult this troubleshooting Guide.

No picture or sound.
- Ensure the device is on.
- Ensure the power outlet is in operation.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

Picture but no sound
- Ensure the audio jacks are securely connected.
- Ensure the audio connector is not damaged.
- Ensure the volume is turned up in VOL/CH setup.
- Ensure you have set the player's AUDIO settings correctly.
- Ensure you have entered the correct AV input for your TV.
- Ensure the audio is not set to mute.

Sound but no picture
- Ensure the video jacks are securely connected.
- Ensure you have entered the correct AV input for your TV.
- Ensure the video connector is not damaged.
- Ensure you have set the player's VIDEO settings correctly.

Pood picture or sound
- Ensure you have set the player's AUDIO settings correctly.
- Ensure the disc is not scratched or stained.
- Ensure the AV connector or the output terminal is not damaged.

"BAD DISC" displayed
- Ensure the disc is not warped, damaged or deformed.
- Ensure the disc is not badly stained or damaged.
- Ensure the disc format is compatible with the player.
- Please check whether you have tried to play a software CD. If so, please restart the player.

Remote control is not working.
- Ensure the remote batteries are working.
- Point the remote control directly at the player's IR sensor.
- Remove any obstacles between the remote and the IR sensor.

Unit is not working.
- Turn off the power, and then turn it on again.

„NO DISC" displayed
- Ensure you have put the disc on the tray. Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

8. Troubleshooting Guide

Phenomena in the below chart does not necessarily mean failure with the TV set. Some phenomena of TV can be easily solved by correct usage of the device asn have been stated in the below chart. In no case repair the device yourselves. It is dangerous.

Phenomena	**Possible cause**
No picture and sound.	Improper connection with AC adapter or Car adapter. Improper power supply. The TV is switched off.
No picture.	Is TV aerial correctly adjusted? Was the installation country correctly selected? Restore the default factory setting. Repeat the channel search.
No sound.	Check the volume setting. Is earphone connected? Is TV muted? (Try MUTE button.) Are the picture and sound systems correctly adjusted?
Diamond in picture.	Improper aerial adjustment. Low signal.
No signal	Incorrect country of inslattion of your TV. Low signal.
Dark picture	Adjust brightness and contrast.
Diamonds in picture, inferior sound.	Very low signal.

Technical Specifications

TV system	PAL, NTSC
Supported discs	DVD video, DVD-R (RW), CD audio, CD-R (RW) with MP3/ JPEG/MPEG4
Video signal features	
Video S/N ratio	≥ 65 dB
Resolution	≥ 500 řádků
Audio signal features	
Frequency response	20 Hz – 20 kHz +/- 1 dB (sampling 96 kHz)
Audio S/N ratio	≥ 90 dB
Dynamic range	≥ 80 dB
Distortion	< 0,01 %
Sampling	96 kHz/24 bits

Output	
Display Screen size	LCD – TFT display, 9“
Video signal output	1 V p-p/75 ohms
Audio output	2 CH (stereo)
Power	12 V =
Power consumption	≤ 15 W
Dimensions	238 X 170 X 41 mm
Weight	1 kg

Changes in technical specifications can change without notice.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union
If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union
If you wish to dispose of this product, request the necessary information about the correct disposal method from local govemment departments or from your seller.

CE This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.