



EN ■ Humidifier

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.**General warnings**

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Always only fill only to the marked maximum water level mark. Never fill the water past the maximum mark.
- When filling, cleaning and removing limescale deposits, proceed according to the instructions in this user's manual.
- Be especially careful when using the appliance since it generates steam.
- When filling or cleaning the appliance, disconnect it by pulling the power plug out of the power socket.
- Understand that high levels of moisture may facilitate the growth of biological organisms in the environment.
- Do not permit the area around the humidifier to become damp or wet. In the event that this happens, set the humidifier to a lower power level. In the event that it is not possible to lower the power of the humidifier, use the humidifier intermittently.

Do not permit absorptive materials such as carpets, curtains, drapes or table cloths to become wet.

- Never leave water in the water tank when the appliance is not being used.
- Empty out and clean the humidifier before storing it. Clean the humidifier before using it again.



WARNING:

The microorganism that may be present in the water or the environment where the appliance is used or stored, may multiply in the water tank and after being dispersed in the air may result in serious health risks, unless the water is changed and the water tank regularly correctly cleaned every 3 days.

- It is necessary to empty it out and refill it every three days. Before filling it, clean it out using tap clean water or cleaning agent, if required by the manufacturer. Remove any limescale, deposits or film that forms on the walls of the water tank or on the inner surfaces, and wipe all surfaces dry.
- Keep the appliance out of children's reach. Steam and boiling water may cause scalding.




Clean the water tank every 3 days.

- Before connecting the appliance to a power socket, check that the technical details on its rating label match the electrical voltage in the socket.
- Ensure that the power socket is properly grounded. In the event that the adapter were to be incorrectly connected in the power socket, it could heat up excessively and be subsequently damaged.
- Guide the power cord so that nobody can trip over or step on it, to prevent its damage and tilting over of the appliance in the event that the power cord is pulled.
- The appliance is designed for use in households, offices or similar types of areas.
- Always install the appliance on an even, dry and stable surface.
- Do not place the appliance in the vicinity of an open flame, gas appliances or devices that are sources of heat and do not expose it to direct sunlight.
- Do not place any items on the appliance, do not sit or stand on the appliance.
- Do not use the appliance in rooms where there is a risk of flammable gases or chemical vapours leaking or in rooms that are very dusty. When the appliance


is running, it must be located at a sufficient distance from curtains or drapes and at least 2 metres from electrical or electronic devices or materials sensitive to moisture in order not to damage them by the effect of increased humidity.

- Do not use the appliance in locations or rooms where insecticides, oil-based or chemical agents were used, or where a fragrance stick was lit.
- Always use original parts and accessories specified by the manufacturer. Never replace any part of this appliance with parts or accessories from another manufacturer.
- Only fill the water tank with clean cold water without any additions. Do not pour water into the water tank through the steam outlet. Do not pour hot water into the water tank.
- Do not drink the water from the water tank, do not water flowers with it or provide it as drinking water to household pets. Always pour out any unused water contained in the water tank down the sink or drain.
- Before putting the appliance into operation, check that it is properly assembled and that the water tank is filled.
- Do not cover the appliance when it is in operation, particularly the steam outlets. Do not place any items into the steam outlets or into the vents. Make sure that these openings are not blocked by foreign objects.
- As a result of increased humidity in the room, water may condensate on window panes or interior furnishings. If this situation arises, turn the appliance off.
- Never tilt the appliance, move the appliance, disassemble or add water into an empty water tank, when it is in operation.
- In the event that you need to move, clean or disassemble the appliance or add water to the water tank, always first turn it off and wait for it to cool down and then disconnect the power plug from the power socket.
- Clean the water tank every week. In the event of more frequent use, you may also clean it twice per week.
- Do not use cleaning products, petrol, window cleaners, furniture cleaning agents, solvents or any other chemical agents to clean the appliance.
- Be especially careful not to spill water when carrying the appliance with water in the water tank.
- To avoid potential injury by electrical shock, do not submerge any part of the appliance's base unit in water or any other liquid.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage it or the power socket. Always disconnect by pulling on the adapter.
- Do not use the appliance if it is damaged, if the adapter has a damaged power cord or power plug.
- In no case should you attempt to repair the appliance yourself, do not make any modifications to it – danger of injury by electrical shock! Entrust all repairs and adjustments to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.


A

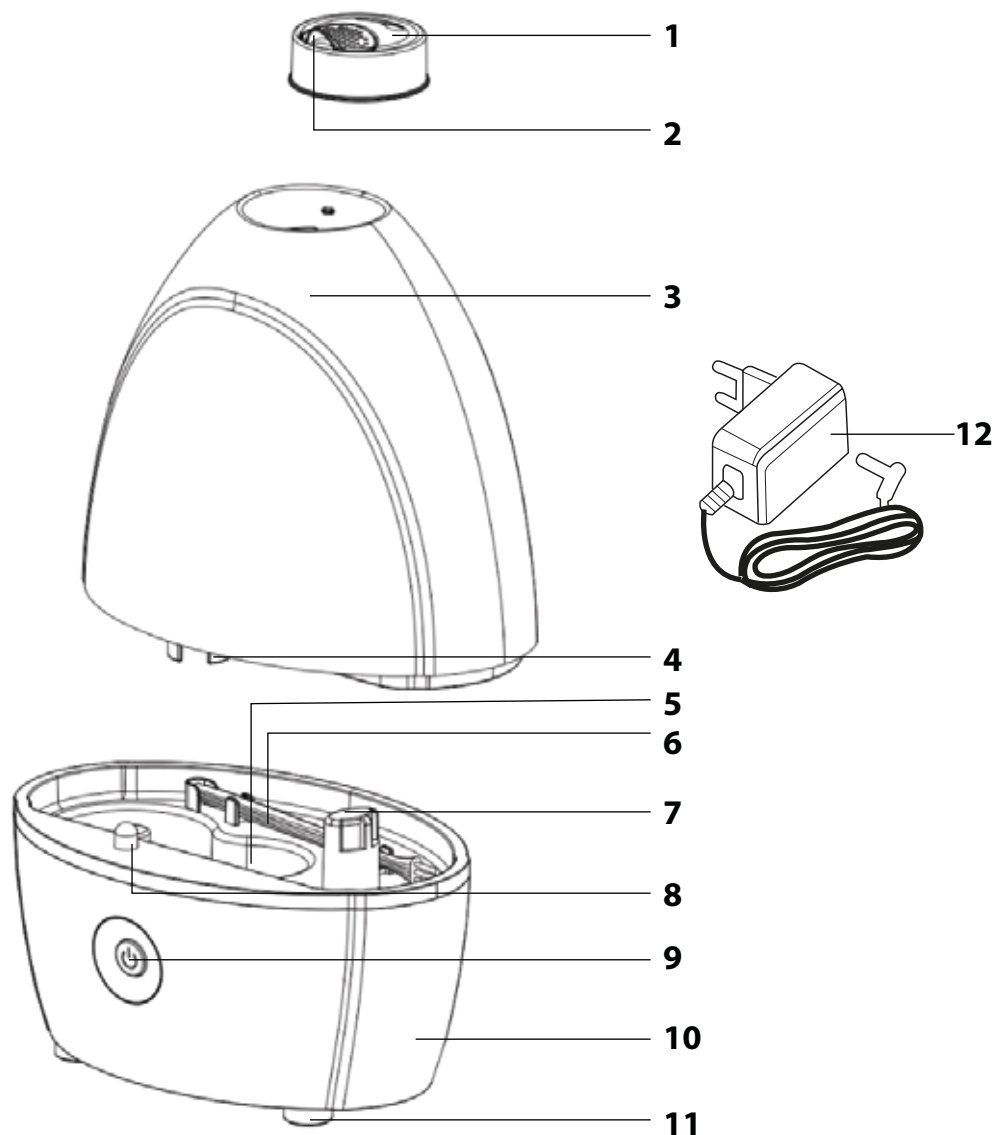


B1

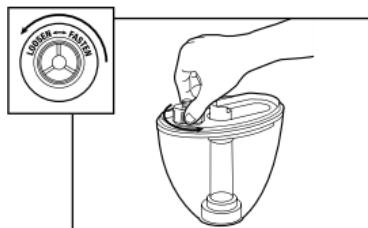


B2

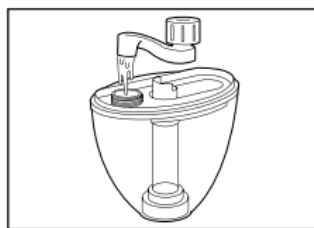


B3

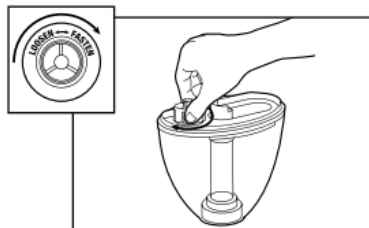

B4

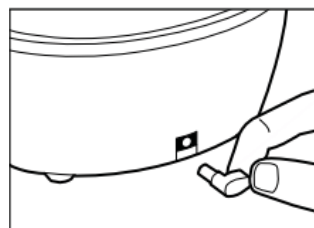

C

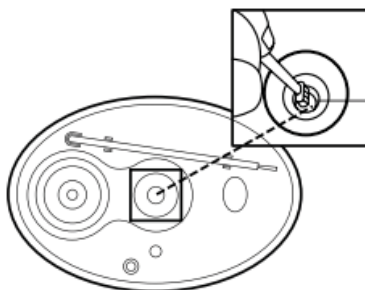

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

- | | |
|---|--|
| A1 Steam outlet nozzle | A7 Air outlet |
| A2 Pillow for applying drops of aromatic oil | A8 Water tank illumination |
| A3 Water tank | A9 Button for On / Off / Operating mode selection / Low water level in tank indicator |
| A4 Filling opening cap on the water tank | A10 Base unit |
| A5 Ultrasound disc | A11 Anti-slip feet |
| A6 Brush | A12 Power adapter |

BEFORE FIRST USE

- Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.

Filling the water tank

1. Check that the power adapter **A12** is disconnected.
2. Carefully take the water tank **A3** off the base unit **A10**.
3. Turn the water tank **A3** upside down and screw out the cap **A4** – see figure **B1**.
4. Pour clean cold water into the water tank **A3** – see figure **B2**.
5. Screw on the cap **A4** – see figure **B3**. Check that it is tightened firmly to prevent water from leaking. Turn the water tank over **A3** so that the cap **A4** is pointing downwards. If no water is leaking from the water tank **A3**, then the cap **A4** is properly tightened.
6. Put it back on the base **A10**.

Connecting the power adapter

1. Insert the connector of the power adapter **A12** into the socket located at the rear of the base unit **A10** – see figure **B4**.
2. Then insert the power adapter plug into a properly grounded power socket. The humidifier is now ready for use.

Turning on the humidifier

1. Position the humidifier on a dry, even and water-resistant surface approx. 15 cm away from walls and other objects. Ensure that there is sufficient free space around the appliance. Do not place the humidifier on carpets, towels, blankets or other absorptive materials.
2. Press button **A9** to start the humidifier. The humidifier will automatically start at low speed and the illumination **A8** will be turned off.

Selecting an operating mode

- Repeatedly press button **A9** to select one of the following operating modes.

Operating mode	Number of times button A9 is pressed	Setting	Water tank illumination
Mode 1	Once	Low speed	Off
Mode 2	Twice	Low speed	On
Mode 3	Three times	High speed	On
Mode 4	Four times	High speed	Off

- If button **A9** is pressed five times, the humidifier will turn off.



Note:

The water tank illumination colour changes automatically when the illumination is turned on.

Low water level indicator

- When the water level falls below the set level, the backlight of button **A9** will change from blue to red and the humidifier will turn off automatically.
- Add water if necessary. Prior to adding water, check that the humidifier is turned off and that the power adapter **A12** is disconnected from the power socket. Then you may continue according to the instructions in section "Filling the water tank".



Warning:

Never remove the water tank **A3** from the base unit **A10** while the humidifier is running. This would automatically turn off the humidifier and creates a risk of its irreversible damage, risk of a dangerous situation arising and risk of injury.

Setting the direction of outflowing steam

- The direction of the outflowing steam can be adjusted within an angle of 360 ° by turning the steam outlet nozzle **A1**.

Aromatic oil

- This humidifier has been designed to enable the use of aromatic oil in it. Next to the steam outlet there is a special pillow **A2**, on to which drops of aromatic oil can be applied. **ALWAYS USE ONLY 3 DROPS OF AROMATIC OIL.**



Warning:

Under no condition pour aromatic oil into the water tank **A3** or into the base unit **A10**. This risks damaging the inner parts of the humidifier.

CLEANING AND MAINTENANCE

- Disconnect the adapter power plug from the power socket and allow the appliance to cool down before cleaning it.
- Adhere to the following instructions relating to the cleaning and maintenance of the humidifier. Otherwise its performance may be negatively affected and undesirable microorganisms may multiply inside.



Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, the adapter or its power cord in water or any another liquid.

Clean after every use

1. Turn off the humidifier and disconnect the power adapter **A12** from the power socket.
2. Take the water tank **A3** off the base unit **A10** and also remove the nozzle **A1**.
3. Screw off the cap **A4** and pour any remaining water out into the sink or down the drain.
4. Rinse out the water tank using clean water and remove any dirt or deposits out of it.
5. Wipe it with a dry wiping cloth.
6. To clean the base unit **A10** and the nozzle **A1**, use a clean soft wiping cloth lightly dampened in warm water. Wipe dry using a clean wiping cloth.



Note:

For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the appliance. No part of this appliance is intended for washing in a dishwasher.



Warning:

Do not leave water inside the water tank **A3** for an extended period of time.

Removing limescale deposits

- Depending on the hardness of the water that is used and the frequency of use, we recommend regularly removing water scale deposits, at least once per week. Limescale deposits can negatively affect the operation of the humidifier and its lifetime.
 - In the event that your water is too hard, we recommend using distilled water.
1. Turn off the humidifier and disconnect the power adapter **A12** from the power socket.
 2. Take the water tank **A3** off the base unit **A10** and also remove the nozzle **A1**.
 3. Screw off the cap **A4** and pour any remaining water out into the sink or down the drain.
 4. Fill the water tank **A3** with one cup of white vinegar and allow it to act for 15 minutes. Using a cleaning brush with soft bristles, you can remove limescale deposits that have accumulated inside the water tank **A3**.
 5. Pour out the contents of the water tank **A3** into a sink or down the drain and rinse out the water tank **A3** using clean cold water.
 6. Wipe it with a dry wiping cloth.

Cleaning the ultrasound disc

1. Turn off the humidifier and disconnect the power adapter **A12** from the power socket.
2. Take the water tank **A3** off the base unit **A10**.
3. For cleaning the ultrasound disc **A5**, use only the supplied cleaning brush **A6**.
4. Carefully wipe the disc **A5** with the cleaning brush **A6** to remove any dust and dirt that is on it – see figure **C**.



Warning:

Do not push on the cleaning brush **A6** so that you do not scratch or damage the disc **A5**.

Storage

- When not using the appliance for an extended period of time, disconnect the connector of the power adapter **A12** from the socket and the power adapter **A12** from the power socket, allow the appliance to cool down and clean it according to the instruction above.
- Before storing it, check that the appliance and all its accessories are thoroughly clean and dry, and that there is no water in the water tank **A3**.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

Troubleshooting

Problem	Solution
The humidifier is not generating steam.	Disconnect and reconnect the power adapter A12 . A power outage occurred. Wait until power is restored and the humidifier will turn on automatically. Check that the water tank A3 is properly seated on the base unit A10 . The surface of the ultrasound disc A5 is dirty. Remove the dirt and soils according to the instructions in section "Cleaning the ultrasound disc".
Air is flowing out of the steam outlet, but steam is not generated.	There is too much water in the water tank A3 . Pour out the excess water. Remains of cleaning agents, etc. remained in the water tank A3 . Clean out the water tank A3 . The surface of the ultrasound disc A5 is dirty. Remove the dirt and soils according to the instructions in section "Cleaning the ultrasound disc". The water is too hard, use water that is softer or use distilled water.
The humidity in the room is low.	The surface of the ultrasound disc A5 is dirty. Remove the dirt and soils according to the instructions in section "Cleaning the ultrasound disc". The water in the water tank A3 is too cold. Use clean but not ice cold water. The ultrasound disc A5 is damaged. Contact an authorised service centre.
The steam has an unpleasant odour.	You are cleaning the water tank A3 incorrectly or the water is dirty. Clean out the water tank A3 using clean cold water.
A white dust is forming on furniture in the vicinity of the humidifier.	These are limescale deposits from hard water that escaped while the humidifier was running. Use softer or distilled water.
The illumination A8 is turned off.	Select an operating mode in which the illumination A8 is turned on.
Button A9 is lit red.	There is a small amount of water in the water tank A3 . Fill up the water tank A3 .
It is not possible to seat the tank A3 on the base unit A10 .	It is only possible to seat the water tank A3 in one direction. Rotate the water tank A3 by 180 ° and try seating it again.
A thin layer of red or pink dirt is forming on or around the ultrasound disc A5 .	Remove the dirt and soils according to the instructions in section "Cleaning the ultrasound disc". Clean the humidifier more regularly.



Note:
In the event that the above do not describe your problem or if any of the describe problems persist, turn off the humidifier and stop using it. The humidifier does not contain any parts that the user can repair themselves. Contact an authorised service centre.

TECHNICAL SPECIFICATIONS

Power adapter	
Input.....	100 – 240 V~, 50 / 60 Hz, 0.5 A
Output.....	24 V – – 0.5 A
Humidifier	
Rated power input.....	12 W
Noise level.....	41 dB(A)
Water tank capacity.....	0.9 l
Humidifier output.....	90 ml/h
Operating time per single water tank.....	approx. 14 hours at low speed
Recommended room area.....	18 m²
Dimensions (l x w x h).....	16.1 x 10.9 x 21.6 cm
Length of power cord.....	150 cm
Weight.....	0.46 kg

The declared noise emission level of the appliance is 41 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Safety class level for electrical shock protection:



Class II – Electrical shock protection is provided by double or heavy-duty insulation.



The product is intended for household use only. The product is not intended for outdoor use.

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.